lel·watch

Neuron PT100 HT Magnet Neuron PT100 HT Average Magnet



The Neuron PT100 HT Magnet sensor comes ready to use out of the box and are fitted with a magnet to enable easy installation on objects made of ferrous materials. This makes the sensor perfect for retrofit installation.

Typical Applications

Collector bar temperature monitoring

Features

- Integrated long life battery up to 10 years lifetime
- Continuous measurement and instant alarm
- Adjustment of parameters such as measurement frequency on request
- Define your own alarm levels in the Neuron app
- Receive alerts as push notifications, emails or SMS
- Easily connect the sensor to the system with the QRcode on the sensor. Ensures immediate and accurate registration in the app on your phone/PC/tablet
- The sensor transmits data to your nearby Neuron Gateway which then again communicates with the Neuron Cloud


Essentials

	PT100HT Magnet	PT100HT Avg. Magnet
PT100 Measuring Range	-50°C to +400°C	-50°C to +400°C
Measuring Frequency	Every 3 sec	Every 10 sec
Report Frequency	Every 2 min, or immediately after measurement if trigger for critical data transmission is reached	Every 10 min, or immediately after measurement if trigger for critical data transmission is reached
Expected Operating Time*	Up to 10 years	

*Depends on measurement frequency, amount of critical data transmissions and ambient temperature

Neuron System Benefits

Sensor - Gateway - Cloud - App



- Robust sensorsSuitable for rough environments
- Wireless Wireless sensor with integrated battery
- Long lifetime Typical 10 years battery life
- Quick installation Wireless, installed and operational in minutes
- Collect and deliver data Data delivery through API and app
- **Broad offering** More than 50 different sensor types available

logical contraction logican contractic contraction logical contraction logical contrac

General Description

Neuron PT100HT Magnet read the temperature and convert it into a digital measurement.

The sensor comes with a magnet with 6kg pull force and will hold 90% of its pull at 400 °C.

Spring loaded measuring tip ensures good thermal connection to surface.

Due to wireless transmission of the signal, it is easy and timesaving to install.

Principle of Operation

The Neuron PT100 measures every third second and transmits every second minute with standard config. The sensor also comes in a version where the sensor measures every ten seconds and transmits the average of the twelve last measurements every ten minute.

Should the trigger for critical data transmission be reached between two transmissions, the sensor transmits immediately after measurement.

The symbol \triangle on the product label refers to this data sheet for important information regarding intended use, requirements for the operating environment etc. If the equipment is used in a manner not specified by El-Watch, the protection provided by the equipment may be impaired.

Technical Specification

Operational Specification

	PT100HT Magnet	PT100HT Avg. Magnet
PT100 Measuring Range	-50°C to +400°C	-50°C to +400°C
Resolution	0.1°C	
Accuracy	0.5°C + 0.005 x t	
Measuring Frequency*	Every 3 sec	Every 10 sec
Report Frequency*	Reports every 2 min. or immediately if trigger for critical data transmission is reached, see below	Reports every 10 min. or immediately if trigger for critical data transmission is reached, see below
Reported value	Reports last reading	Reports average of last 12 readings
Trigger for Critical Data Transmission*	2°C change in measurement	10°C change in measurement
Electronics Operating Environment	Ambient temperature: -40 - 85 °C Relative humidity: 0-100% Altitude < 2000m above sea level Pollution degree: 4	
IP Grade	IP 67, wet conditions, indoor use.	
Radio Frequency	863-870 MHz / 902-928 MHz	
Battery Type	Li-SOCI2, 3.6V	
Expected Operating Time**	Up to 10 years	

* Adjustable on request

* Depends on measurement frequency, amount of critical data transmissions

Physical Specification

Materials	POLYblend 65 FS / TPU PT100 probe: 316 Stainless Steel / Magnet
Connection Type	Glass fibre wire
Process Connection:	Magnet
Dimensions LxWxH	Sensor: 37x23x14mm Magnet: 40x25x28 mm

Ordering Information

	Europe/The Middle East/Africa Part number	North America/Australia/ New Zealand Part number
PT100HT Magnet	422666	422675
PT100HT Avg. Magnet	422657	422665

Regulatory

Certifications	Directives/Standard	
C E 监	RED 2014/53/EU Radio Equipment Regulations 2017	
FC III Industry Canada	FCC Part 15C	
Safety	IEC 61010-1:2010	
	0	

lel·watch

Installation

Neuron sensors are ready for use out of the box and will start logging data after registering the sensor in the app. Even though Neuron sensors deliver great range and long battery life, following some simple guidelines for mounting of the sensor and gateway can greatly improve signal coverage and lifetime of the sensor.

To ensure optimal antenna performance and signal strength, the sensor should be placed elevated with some distance to fixed objects. Keep in mind that RF-signals are greatly affected by close metallic surfaces.

For sensors with an external antenna, the antenna should be clear off the metallic surface.

You can find all you need to get started with Neuron Sensors at our support site: support.el-watch.com



Fastening

The small, compact blue Neuron sensors are fitted with fastening holes for use with cable ties. The sensors are also delivered with double-sided tape that may be used for fastening of the sensors.

All the black Neuron sensors, like the Neuron IR380 and Neuron Vibration, are fitted with a strong magnet at the back for easy fastening. If there is no magnetic surface, then double-sided tape is a good solution.



Place elevated with distance to fixed objects



Keep antenna clear off the metallic surface




Sensors with IP21 Enclosure



Sensors with IP67 Enclosure

Dimensions

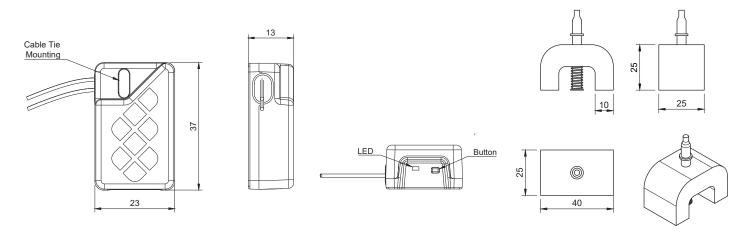

// PRODUCT SHEET // TECHNICAL SPECIFICATION

El-Watch AS • Rindalsvegen 6 • 6657 Rindal • (+47) 71 66 69 08 2022 - All rights reserved

